

USER'S MANUAL OF UNDERSTYLE COVERMATE

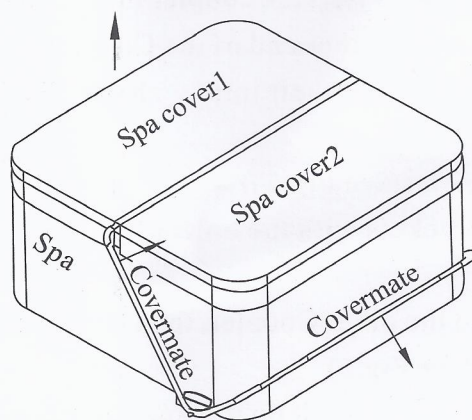


Fig.1

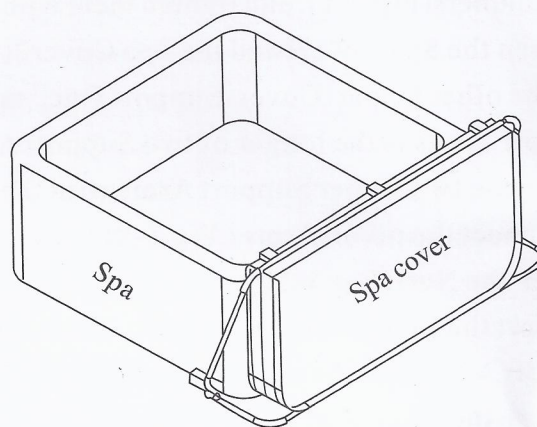


Fig.2

If any malfunction occurs because of your wrong installation, even the property is lost, we do not undertake any responsibility. Ask to read the manual carefully before installing:

This kind of the understyle covermates are for applications to spa especially, having beautiful shapes. They are easy to install and popularly used in families、VIP sauna place、rooms in luxury hotels etc.

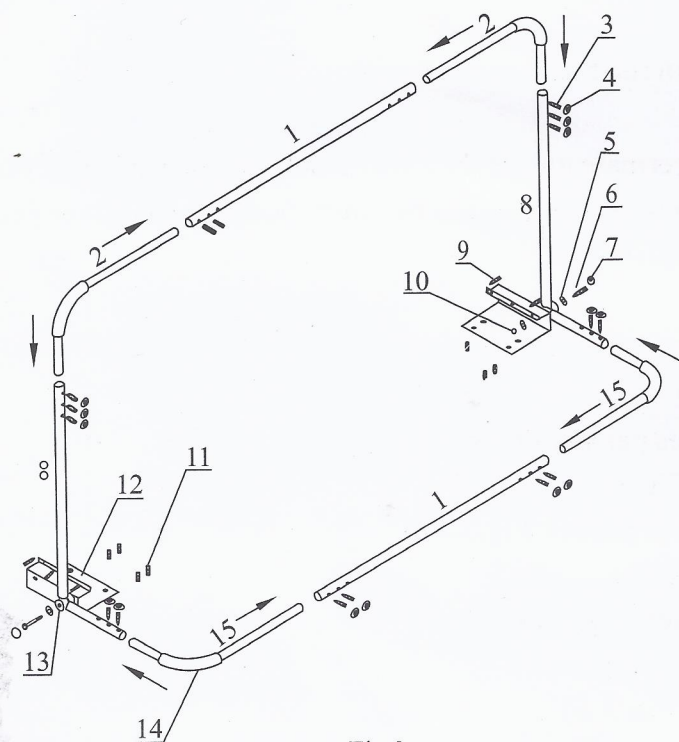


Fig.3

- 1、Coupler
- 2、Upper Cover Support Arms
- 3、Screw
- 4、screw Cap
- 5、Washer(4 pieces per set)
- 6、Bolt(4 pieces per set)
- 7、Bolt Cap(2 pieces per set)
- 8、Side pivot Arms
- 9、Screw(6 pieces per set)
- 10、Nut(2 pieces per set)
- 11、Bolt(8 pieces per set)
- 12、Mounting Bracket
(2 pieces per set)
- 13、Plastic Sleeve Pipe
(4 pieces per set)
- 14、Sponge Sleeve Pipe
(4 pieces per set)
- 15、Lower Cover Support Arms

Installation Instructions

- 1) Fix the Mounting Brackets (Fig.3-12) on the ground with the bolts (Fig.3-11), with the bolts facing down, the distance between the two brackets being decided according to size of your spa.
- 2) Place the spa on the brackets. Note: Be sure to use the pivot hole closest to the back of the spa

and it is about 6cm from the back of the Spa to the Spa Cover when erected on the Covermate

3) Position the Spa Covers(in closed position) on the Spa, making sure that all four corners are properly positioned and square on the spa.

4) Insert the long end of one of the two Upper Cover Support Arms (Fig.3-2) into either of the two Couplers(Fig.3-1), and tighten them with the screws, then insert the coupler into the bag hole between the Spa Cover1 and the Spa Cover2(see Fig.1). At the other end of the Coupler, connect it to the other Upper Cover Support One, not tightening them at their joint. Note:The Upper Support Arms is the longer of two Support Arms.

5) Join the two Upper Support Arms with the two pivot Arms(see Fig.3).

6) Connect the pivot Arms (Fig.3-8) to the Mounting Brackets with the bolts (Fig.3-6), then tighten the Nuts(Fig.3-10)

7) Insert the Lower Cover Support Arms (Fig.3-2) into the other Coupler, then slide the lower Support Arms into the remaining end of the Pivot Arms.(see Fig.3)

8) Raise the Spa Cover according to the arrow (see Fig.1), and put it on the Spa Cove2. Next, rotate the Covermate according to the arrow (see Fig.1) till the Lower Cover Support Arms lie on the ground (see Fig.2). During this procedure, according to the size of the Spa Covers, adjust the position between the Spa and the fixed Mounting Brackets, and the position among the Support Arms, the Side Pivot Arms and the Coupler to rotate the covermates freely and be easy to lay the Lower Cover Support Arms on the ground.

9) Tighten two or three screws at the joints among the Support Arms, the Side Pivot Arms and the Coupler, and do all screws(Fig.3-9) between the Mounting Brackets and the Spa to prevent the Spa from moving.

10) Cover the screws and the bolts with the black plastic caps.

Caution!

1) Don't permit children to use the Covermate unless they are closely supervised at all times.

2) Don't use the Covermate under high wind conditions, or injury from the spa cover being blown over and impacting the spa user can occur!

Accessories for the Understyle Covermate

- 1、Couplers(2 pieces per set, Fig.3-1)
- 2、Upper Cover Support Arms(2 pieces per set, Fig.3-2)
- 3、Side pivot Arms(2 pieces per set, Fig.3-8)
- 4、Lower Cover Support Arms(2 pieces per set, Fig.3-15)
- 5、Mounting Brackets(2 pieces per set, Fig.3-12)
- 6、Sponge Sleeve Pipes(4 pieces per set, Fig.3-14)
- 7、Plastic Sleeve Pipes(4 pieces per set, Fig.3-13)
- 8、Bolts(M10 × 75, 2 pieces per set, Fig.3-6)
- 9、Bolt Caps(plastic, 2 pieces per set, Fig.3-7)
- 10、Nuts(2 pieces per set, Fig.3-10)
- 11、Washers(4 pieces per set, Fig.3-5)
- 12、Screws(M5, 24 pieces per set, Fig.3-3)
- 13、Screw Caps(plastic, 24 pieces per set, Fig.3-4)